

5680 V1.0(RS232)		
Name	Command(TX)	Feedback(RX)
Power On	99 A2 01 01 27 AA	99 A2 FF FF 27 AA
Power Off	99 A2 FD 00 00 AA	99 25 FD 01 00 AA
HOME	99 23 00 01 FF AA	99 25 00 01 01 AA
Mute	99 23 02 01 FD AA	99 25 02 01 01 AA
Sound Mode	99 23 03 01 FC AA	99 25 03 01 01 AA
Picture Mode	99 23 04 01 FB AA	99 25 04 01 01 AA
AV	99 23 08 01 F7 AA	99 25 08 01 01 AA
YPbPr	99 23 0A 01 F5 AA	99 25 0A 01 01 AA
VGA	99 23 0B 01 F4 AA	99 25 0B 01 01 AA
HDMI1	99 23 0E 01 F1 AA	99 25 0E 01 01 AA
HDMI2	99 23 0F 01 F0 AA	99 25 0F 01 01 AA
HDMI3	99 23 10 01 EF AA	99 25 10 01 01 AA
DP	99 23 11 02 EE AA	99 25 11 01 02 AA
OPS	99 23 11 01 EE AA	99 25 11 01 01 AA
TYPE-C	99 23 11 03 EE AA	99 25 11 01 03 AA
Menu	99 23 12 01 ED AA	99 25 12 01 01 AA
Source	99 23 13 01 EC AA	99 25 13 01 01 AA
Exit	99 23 14 01 EB AA	99 25 14 01 01 AA
Alone (ECO)	99 23 16 01 E9 AA	99 25 16 01 01 AA
Volume(+)	99 23 17 01 E8 AA	99 25 17 01 01 AA
Volume(-)	99 23 18 01 E7 AA	99 25 18 01 01 AA
Information	99 23 1C 01 E3 AA	99 25 1C 01 01 AA
Up	99 23 22 01 DD AA	99 25 22 01 01 AA
Down	99 23 23 01 DC AA	99 25 23 01 01 AA
Left	99 23 24 01 DB AA	99 25 24 01 01 AA
Right	99 23 25 01 DA AA	99 25 25 01 01 AA
Enter	99 23 26 01 D9 AA	99 25 26 01 01 AA
Media	99 23 27 01 D8 AA	99 25 27 01 01 AA
觸控功能(開)	99 23 28 01 D7 AA	99 25 28 01 01 AA
觸控功能(關)	99 23 29 01 D6 AA	99 25 29 01 01 AA
實體按鍵控制(開)	99 23 2A 01 D5 AA	99 25 2A 01 01 AA
實體按鍵控制(關)	99 23 2B 01 D4 AA	99 25 2B 01 01 AA
設置音量 (0)	99 23 37 00 C8 AA	99 25 37 01 00 AA
設置音量 (50)	99 23 37 32 C8 AA	99 25 37 01 32 AA
設置音量 (100)	99 23 37 64 C8 AA	99 25 37 01 64 AA
設置背光 (0)	99 23 36 00 C9 AA	99 25 36 01 00 AA
設置背光 (50)	99 23 36 32 C9 AA	99 25 36 01 32 AA
設置背光 (100)	99 23 36 64 C9 AA	99 25 36 01 64 AA
讀取音量	99 23 FE 01 CC AA	99 25 01 XX XX AA 99 25 01(數值)(CS)AA
讀取信號通道	99 23 FE 02 CB AA	(HOME) 99 25 02 00 90 AA
		(AV) 99 25 02 05 95 AA
		(YPbPr) 99 25 02 06 96 AA
		(VGA) 99 25 02 01 91 AA
		(HDMI1) 99 25 02 07 97 AA
		(HDMI2) 99 25 02 08 98 AA
		(HDMI3) 99 25 02 0B 9B AA
		(DP) 99 25 02 0C 9C AA
		(OPS) 99 25 02 0A 9A AA
		(TYPE-C)99 25 02 0D 9D AA

讀取當前背光值	99 23 FE 08 C5 AA	99 25 08 XX XX AA 99 25 08(數值)(CS)AA
讀取音訊狀態	99 23 FE 09 C4 AA	99 25 09 01 2F AA(Mute On) 99 25 09 00 2E AA(Mute Off)
系統運行總時間	99 23 FE 0C C1 AA	99 25 XX XX XX AA
上一次開機時間	99 23 FE 0D C0 AA	99 25 XX XX XX AA
開機時間	99 23 FE 0E BF AA	99 25 XX XX XX AA
固件版本	99 23 30 01 CF AA	99 25 XX XX XX AA
MCU版本	99 23 30 10 CF AA	MCU時間/日期(ASCII)