

項目	參數
波特率	9600
數據位	8
停止位	1
校驗位	None
流控制	None

序號	功能	狀態	模式	碼值	備註
1	開關機	SET	Power on	AA BB CC 01 00 00 01 DD EE FF	
2		SET	Power off	AA BB CC 01 01 00 02 DD EE FF	
3	切換輸入源	SET	TV	AA BB CC 02 01 00 03 DD EE FF	
4		SET	DTV	AA BB CC 02 10 00 12 DD EE FF	
5		SET	AV	AA BB CC 02 02 00 04 DD EE FF	
6		SET	YPBPR	AA BB CC 02 0F 00 0F DD EE FF	
7		SET	Android	AA BB CC 02 0A 00 0C DD EE FF	
8		SET	PC/DVI	AA BB CC 02 08 00 0A DD EE FF	
10		SET	VGA1	AA BB CC 02 03 00 05 DD EE FF	
11		SET	VGA2	AA BB CC 02 04 00 06 DD EE FF	
12		SET	VGA3	AA BB CC 02 0B 00 0D DD EE FF	
13		SET	HDMI1	AA BB CC 02 06 00 08 DD EE FF	
14		SET	HDMI2	AA BB CC 02 07 00 09 DD EE FF	
15		SET	HDMI3	AA BB CC 02 05 00 07 DD EE FF	
16		SET	DP	AA BB CC 02 11 00 13 DD EE FF	
17	聲音	SET	00—100	AA BB CC 03 00 xx ** DD EE FF	注：xx=音量大小值，如音量為30(十進制)=1E(十六進制)，XX=1E； **=03+00+1E(十六進制)=21
18		SET	Mute	AA BB CC 03 01 00 04 DD EE FF	
19		SET	Unmute	AA BB CC 03 01 01 05 DD EE FF	
20	影像模式	SET	16:09	AA BB CC 08 00 00 08 DD EE FF	
21		SET	4: 3	AA BB CC 08 01 00 09 DD EE FF	
22		SET	Point to Point	AA BB CC 08 07 00 0F DD EE FF	
23	電腦電源	SET	ON	AA BB CC 09 01 00 0A DD EE FF	
24		SET	OFF	AA BB CC 09 00 00 09 DD EE FF	

序号	功能	状态	模式	码值	备注
28	遥控器功能	SET	WIN	AA BB CC 07 0B 00 12 DD EE FF	
29		SET	Space	AA BB CC 07 46 00 4D DD EE FF	
30		SET	Alt+Tab	AA BB CC 07 1D 00 24 DD EE FF	
31		SET	Alt+F4	AA BB CC 07 1F 00 26 DD EE FF	
32		SET	NUM_1	AA BB CC 07 00 00 07 DD EE FF	
33		SET	NUM_2	AA BB CC 07 10 00 17 DD EE FF	
34		SET	NUM_3	AA BB CC 07 11 00 18 DD EE FF	
35		SET	NUM_4	AA BB CC 07 13 00 1A DD EE FF	
36		SET	NUM_5	AA BB CC 07 14 00 1B DD EE FF	
37		SET	NUM_6	AA BB CC 07 15 00 1C DD EE FF	
38		SET	NUM_7	AA BB CC 07 17 00 1E DD EE FF	
39		SET	NUM_8	AA BB CC 07 18 00 1F DD EE FF	
40		SET	NUM_9	AA BB CC 07 19 00 20 DD EE FF	
41		SET	NUM_0	AA BB CC 07 1B 00 22 DD EE FF	
42		SET	Display	AA BB CC 07 1C 00 23 DD EE FF	
43		SET	Input	AA BB CC 07 07 00 0E DD EE FF	
44		SET	Home	AA BB CC 07 48 00 4F DD EE FF	
45		SET	Menu	AA BB CC 07 0D 00 14 DD EE FF	
46		SET	Delete	AA BB CC 07 40 00 47 DD EE FF	
47		SET	Energy	AA BB CC 07 4E 00 55 DD EE FF	
48		SET	UP	AA BB CC 07 47 00 4E DD EE FF	
49		SET	DOWN	AA BB CC 07 4D 00 54 DD EE FF	
50		SET	LEFT	AA BB CC 07 49 00 50 DD EE FF	
51		SET	RIGHT	AA BB CC 07 4B 00 52 DD EE FF	
52		SET	ENTER	AA BB CC 07 4A 00 51 DD EE FF	
53		SET	Point	AA BB CC 07 06 00 0D DD EE FF	
54		SET	Back	AA BB CC 07 0A 00 11 DD EE FF	
55		SET	CH+	AA BB CC 07 02 00 09 DD EE FF	
56		SET	CH-	AA BB CC 07 09 00 10 DD EE FF	
57		SET	VOL+	AA BB CC 07 03 00 0A DD EE FF	
58		SET	VOL-	AA BB CC 07 41 00 48 DD EE FF	

59		SET	PageUp	AA BB CC 07 42 00 49 DD EE FF	
60		SET	PageDown	AA BB CC 07 0F 00 16 DD EE FF	
61		SET	F1	AA BB CC 07 45 00 4C DD EE FF	
62		SET	F2	AA BB CC 07 12 00 19 DD EE FF	
63		SET	F3	AA BB CC 07 51 00 58 DD EE FF	
64		SET	F4	AA BB CC 07 5B 00 62 DD EE FF	
65		SET	F5	AA BB CC 07 44 00 4B DD EE FF	
66		SET	F6	AA BB CC 07 50 00 57 DD EE FF	
67		SET	F7	AA BB CC 07 43 00 4A DD EE FF	
68		SET	F8	AA BB CC 07 1A 00 21 DD EE FF	
69		SET	F9	AA BB CC 07 04 00 0B DD EE FF	
70		SET	F10	AA BB CC 07 59 00 60 DD EE FF	
71		SET	F11	AA BB CC 07 57 00 5E DD EE FF	
72		SET	F12	AA BB CC 07 08 00 0F DD EE FF	
73		SET	RED	AA BB CC 07 5C 00 63 DD EE FF	
74		SET	GREEN	AA BB CC 07 5D 00 64 DD EE FF	
75		SET	YELLOW	AA BB CC 07 5E 00 65 DD EE FF	
76		SET	BLUE	AA BB CC 07 5F 00 66 DD EE FF	

序號	功能	狀態	碼值	返回碼值	模式
1	獲取電源狀態	GET	AA BB CC 01 02 00 03 DD EE FF	AA BB CC 80 00 00 80 DD EE FF	Power on
2		GET		AA BB CC 80 01 00 81 DD EE FF	Power off
3	獲取音量大小	GET	AA BB CC 03 02 00 05 DD EE FF	AA BB CC 82 00 xx ** DD EE FF	volume
4	獲取聲音狀態	GET	AA BB CC 03 03 00 06 DD EE FF	AA BB CC 82 01 00 83 DD EE FF	Mute
5		GET		AA BB CC 82 01 01 84 DD EE FF	Unmute
6	獲取輸入源狀態	GET	AA BB CC 02 00 00 02 DD EE FF	AA BB CC 81 01 00 82 DD EE FF	TV
7		GET		AA BB CC 81 10 00 91 DD EE FF	DTV
8		GET		AA BB CC 81 02 00 83 DD EE FF	AV
9		GET		AA BB CC 81 0F 00 90 DD EE FF	YPBPR
10		GET		AA BB CC 81 0A 00 8B DD EE FF	Android
11		GET		AA BB CC 81 08 00 89 DD EE FF	PC/DVI
12		GET		AA BB CC 81 03 00 84 DD EE FF	VGA1/VGA
13		GET		AA BB CC 81 04 00 85 DD EE FF	VGA2
14		GET		AA BB CC 81 0B 00 8C DD EE FF	VGA3
15		GET		AA BB CC 81 06 00 87 DD EE FF	HDMI1
16		GET		AA BB CC 81 07 00 88 DD EE FF	HDMI2
17		GET		AA BB CC 81 05 00 86 DD EE FF	HDMI3
18		GET		AA BB CC 81 11 00 92 DD EE FF	DP
19	獲取PC狀態	GET	AA BB CC 09 02 00 0B DD EE FF	AA BB CC 83 00 00 83 DD EE FF	ON
20		GET		AA BB CC 83 01 00 84 DD EE FF	OFF
21		GET		AA BB CC 83 02 00 85 DD EE FF	SLEEP
22		GET		AA BB CC 83 03 00 86 DD EE FF	Hibernate